



YASHICA

FX-1

ASSEMBLING CHART

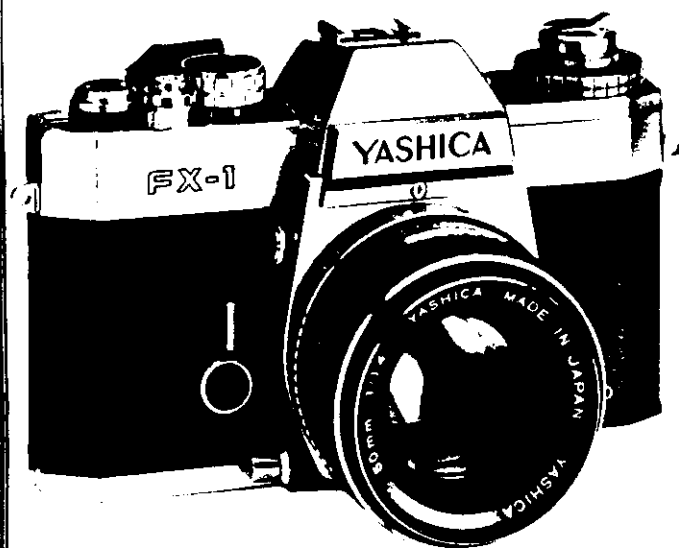



YASHICA CO., LTD.
T O K Y O J A P A N

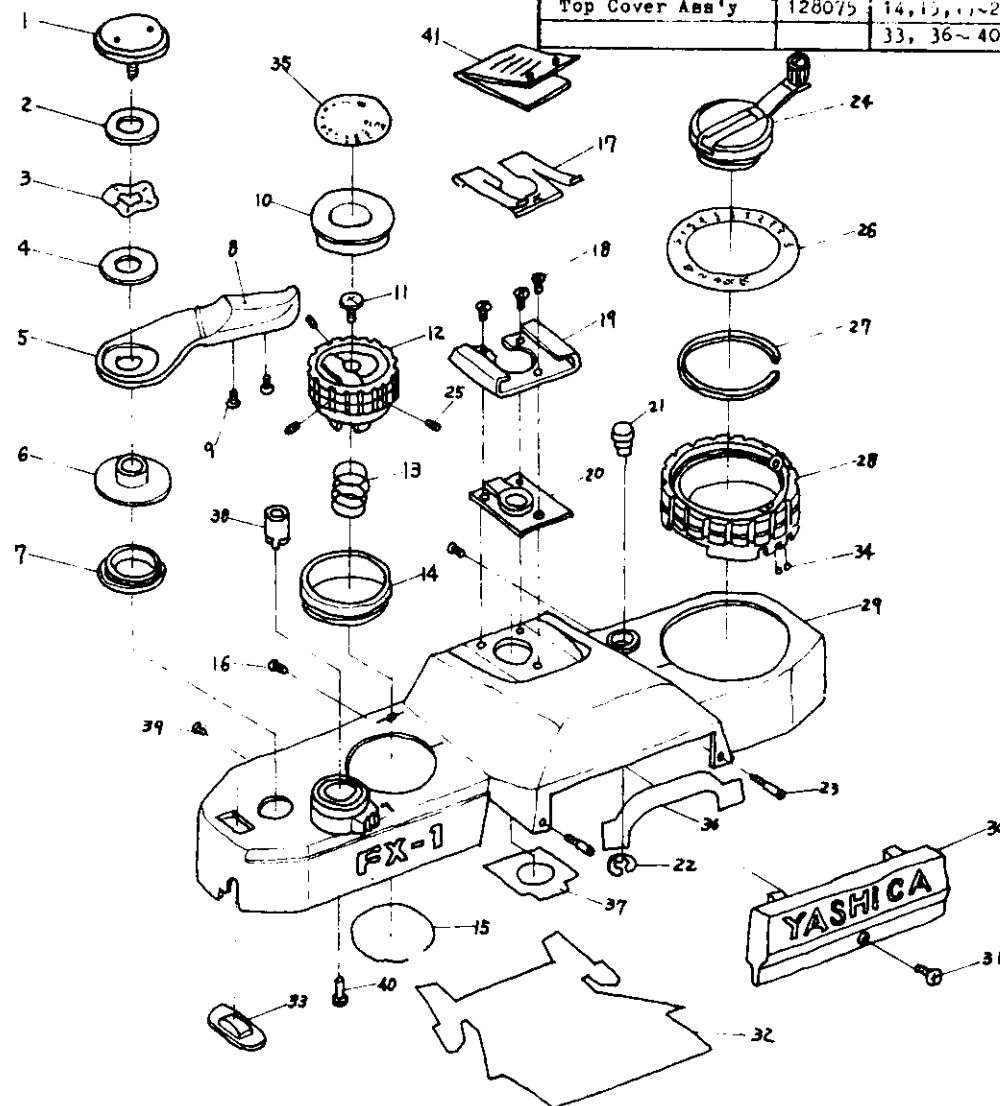

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION (FIG. NO.)	PARTS NO	DESCRIPTION	QUANTITY
Winding Lever Ass'y	128077	5, 8, 9	1 128658	Winding Lever S.S.	1
ASA Dial Ass'y	128082	28, 34,	2 101405	Winding Lever Friction	1
Shutter Dial Ass'y	128098	10, 12, 25,	3 101407	Winding Lever Spring	1
Top Cover Ass'y	128075	14, 15, 17, 22, 29, 32,	4 60327124	Winding Lever Knob	1
		33, 36~40,	5 ★	Winding Lever Sub Ass'y	1
			6 128659	Winding Lever Base	1
			7 128654	Winding Lever Spacer	1
			8 ★	Winding Lever Knob	1
			9 ★	Winding Lever Knob S.S.	2
			10 12833410	Shutter Dial Name Plate Base	1
			11 128128	Shutter Dial S.S.	1
			12 ★	Shutter Dial Sub Ass'y	1
			13 128339	Shutter Dial Spring	1
			14 128341	Shutter Dial Holder	1
			15 128343	Shutter Dial Holder Spring	1
			16 170004	Top Cover S.S.	2
			17 128110	Shoe Dress Plate	1
			18 61823022	Accessory Shoe S.S.	3
			19 128109	Accessory Shoe	1
			20 128113	Contact Ass'y	1
			21 128441	Check Button	1
			22 66102525	Snap Ring E-25	1
			23 128127	Front Plate S.S.	2
			24 128078	Rewind Knob Ass'y	1
			25 62501025	Shutter Dial Name Plate Base S.S.	3
			26 128439	ASA Name Plate	1
			27 128430	ASA Dial Ring	1
			28 ★	ASA Dial Sub Ass'y	1
			29 ★	Top Cover Sub Ass'y	1
			30 128156	Front Name Plate	1
			31 63713521	Front Name Plate S.S.	1
			32 128587	Insulation Cover (A)	1
			33 128853	Counter Window	1
			34 66701520	Steel Ball	2
			35 128340	Shutter Dial Name Plate	1
			36 128588	Insulation Cover (B)	1
			37 128586	Insulation Cover (C)	1
			38 128106	Release Button	1
			39 61902521	Release Button S.S.	1
			40 104222	Release Button Guide	1
			41 128115	Back Light-proof Plate	1

NOTE : (Parts with marked "★" are not available)

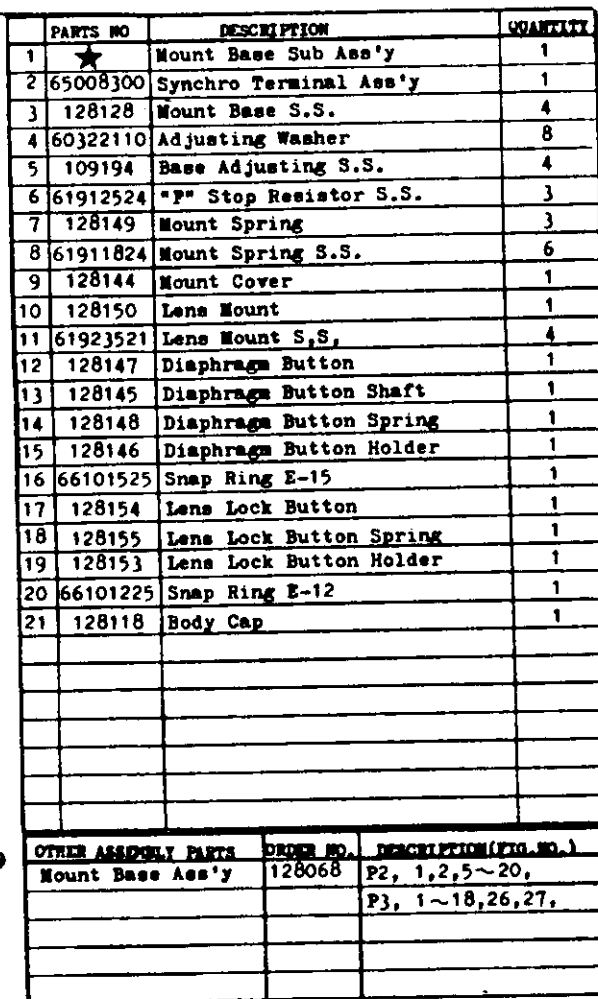

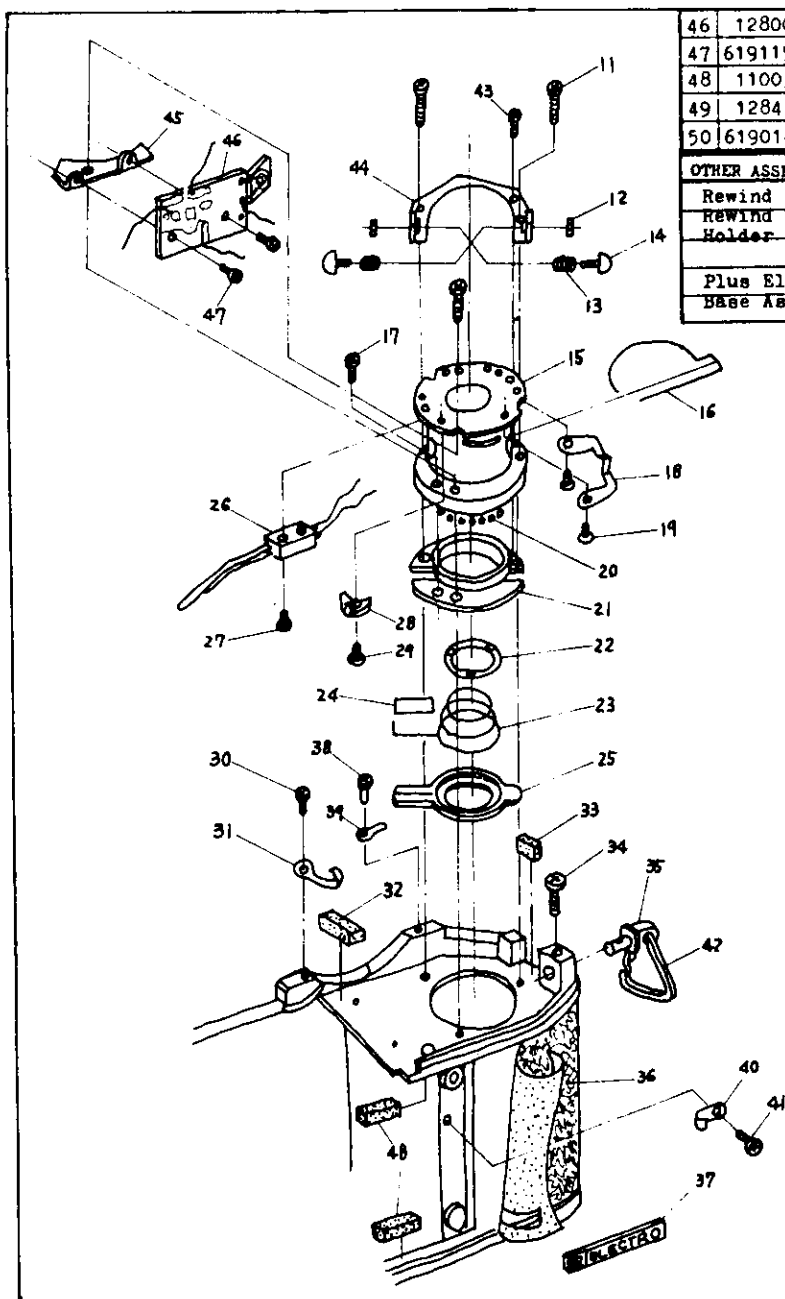


46	128004	Print Base Ass'y	1
47	61911522	Print Base S.S.	2
48	110039	Light-proof Moquette	2
49	128438	ASA Stopper S.S.	1
50	61901824	ASA Resistor Base S.S.	1
OTHER ASSEMBLY PARTS			
Rewind Shaft Ass'y	128043	1~7,	
Rewind Shaft Holder Ass'y	128041	8~10, 12~21, 26~29, 43, 44, 49, 50,	
Plus Electrode Base Ass'y	128086	22~25,	

1	PARTS NO	DESCRIPTION	QUANTITY
1	128446	Battery Case Ring	1
2	128460	Rewind Shaft Ring	1
3	128405	Plus Electrode Contact	1
4	402462	Battery Case Label	1
5	★	Rewind Shaft Sub Ass'y	1
6	128404	Plus Electrode Ring	1
7	61815522	Plus Electrode Ring S.S.	1
8	128436	ASA Indicator Pipe Nut	1
9	128038	ASA Indicator Pipe Ass'y	1
10	128437	ASA Resistor Base	1
11	63917022	Rewind Shaft Holder S.S.	3
12	66101225	Snap Ring E-12	2
13	128458	Brush Spring	2
14	128456	Brush	2
15	★	Rewind Shaft Holder	1
16	128409	Rewind Shaft Click Spring	1
17	61915022	Rewind Shaft Holder S.S.	1
18	128429	Exposure Correction Click Spring	1
19	61911524	Exposure Correction Click Spring S.S.	2
20	66701520	Steel Ball ϕ 1.5	34
21	128416	Rewind Shaft Holder Base	1
22	★	Electrode Slip Ring	1
23	★	Plus Electrode Spring	1
24	★	Plus Electrode Spring Fixer	1
25	★	Plus Electrode Base	1
26	128444	Battery Check Contact Base	1
27	61905024	Battery Check Contact Base S.S.	1
28	128454	ASA Dial Stopper	1
29	61912024	ASA Dial Stopper S.S.	1
30	61911524	Lead Wire Holder (II) S.S.	1
31	101172	Lead Wire Holder (II)	1
32	128195	Body Light-proof Moquette	1
33	128195	Body Light-proof Moquette	1
34	61927024	Strap Holder S.S.	2
35	65005101	Strap Holder	2
36	128191	Front Leather (B)	1
37	128107	"ELECTRO" Name Plate	1
38	61912222	Lug Plate S.S.	1
39	170446	Lug Plate	1
40	110928	Lead Wire Holder	1
41	61911524	Lead Wire Holder S.S.	1
42	128890	Strap Holder Ring	2
43	61915522	Brush Holder Plate S.S.	1
44	★	Brush Holder Plate Sub Ass'y	1
45	128580	Print Base Fitting Plate	1


NOTE : (Parts with marked "★" are not available)

No.4


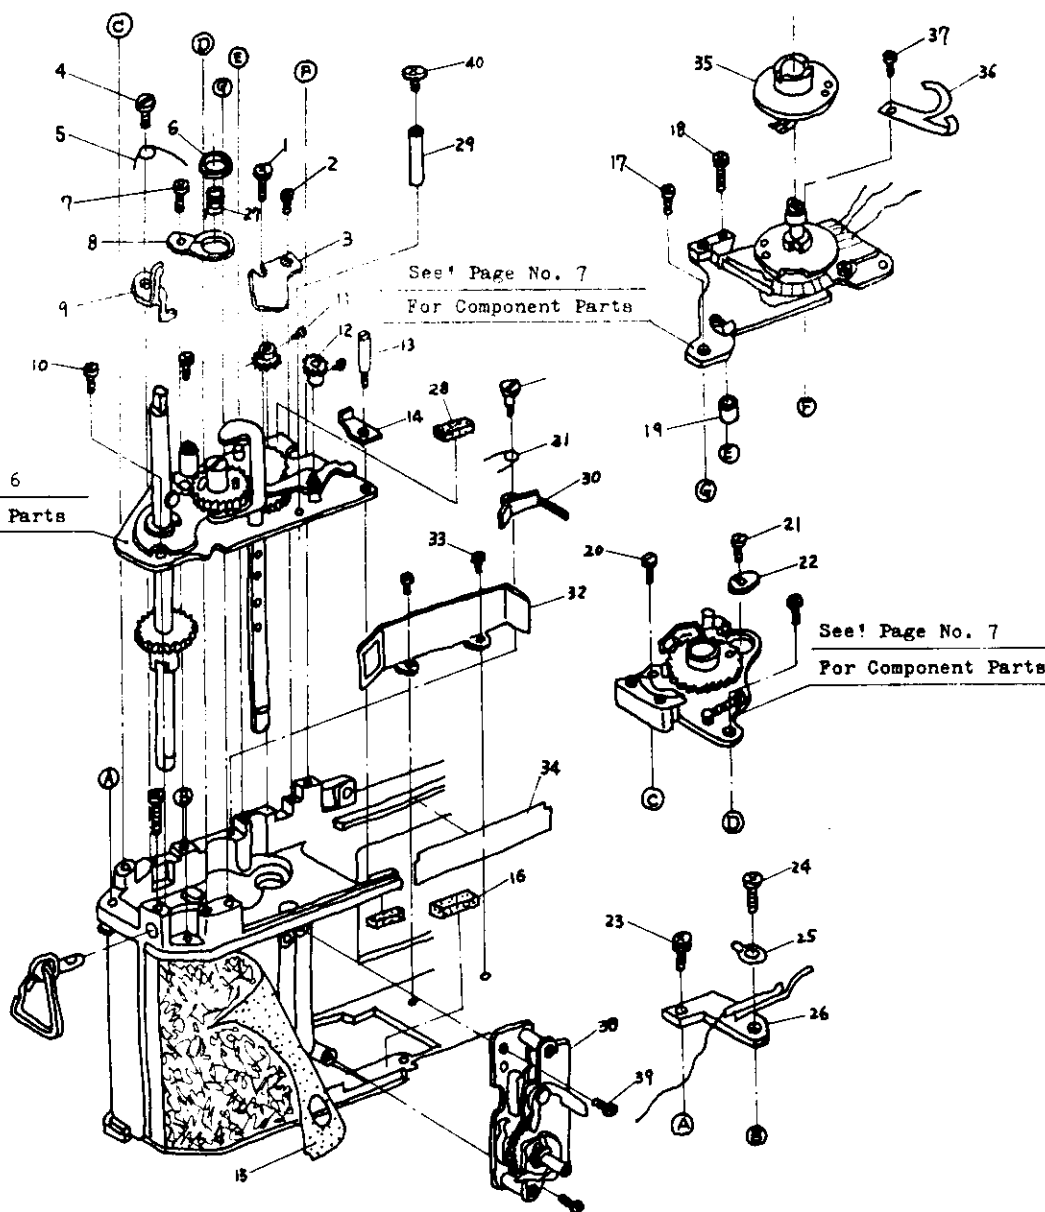


PARTS NO	DESCRIPTION	QUANTITY
1	63924024 Turn Limit Plate S.S.	1
2	63824024 Turn Limit Plate S.S.	1
3	128226 Turn Limit Plate	1
4	121865 Returning Lever Shaft	2
5	121877 Returning Lever Spring	1
6	170252 Anti-rewind Collar	1
7	63913024 Anti-rewind Base Plate S.S.	1
8	128652 Anti-rewind Base Plate	1
9	104803 Returning Lever	1
10	63924024 S-W Base Plate S.S.	1
11	121233 Curtain Shaft Gear S.S.	1
12	107151 Curtain Shaft Gear	1
	107166 (Either Choice)	
13	128234 First Curtain Hook Lever Stopper	1
14	170130 Upper Gear Fixing Hook Regulating Plate	1
15	128190 Front Leather A	1
16	110039 Body Front Light-proof Moquette	2
17	63813522 Change Dial Base Plate S.S.	1
18	63918524 Change Dial Base Plate S.S.	1
19	128318 Auto-manual Change Base Plate Collar	1
20	63913024 Counter Base Plate S.S.	2
21	121866 Counter Cam S.S.	1
22	170510 Counter Cam	1
23	121433 Synchro Contact S.S.	1
24	63914022 Synchro Contact S.S.	1
25	170446 Lug Plate	1
26	★ Synchro Contact Sub Ass'y	1
27	128653 Winding Kick Spring	1
28	170270 S-W Base Plate Light-proof moquette	1
29	128229 S-W Base Plate Holder	1
30	128664 Winding Regulating Lever	1
31	128665 Winding Regulating Lever Spring	1
32	121035 Light-proof Plate Ass'y	1
33	61912024 Light-proof Plate S.S.	2
34	128387 Shutter Light-proof Curtain	1
35	128021 Slide Plate Ass'y	1
36	128589 Lead Wire Holder	1
37	63914022 Lead Wire Holder S.S.	1
38	121038 Self-timer Ass'y	1
39	61913024 Self-timer S.S.	2
40	66001013 Lamp Holder S.S.	1
OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION (FIG. NO.)
Synchro Contact Ass'y	128022	25, 26,

NOTE : (Parts with marked "★" are not available)

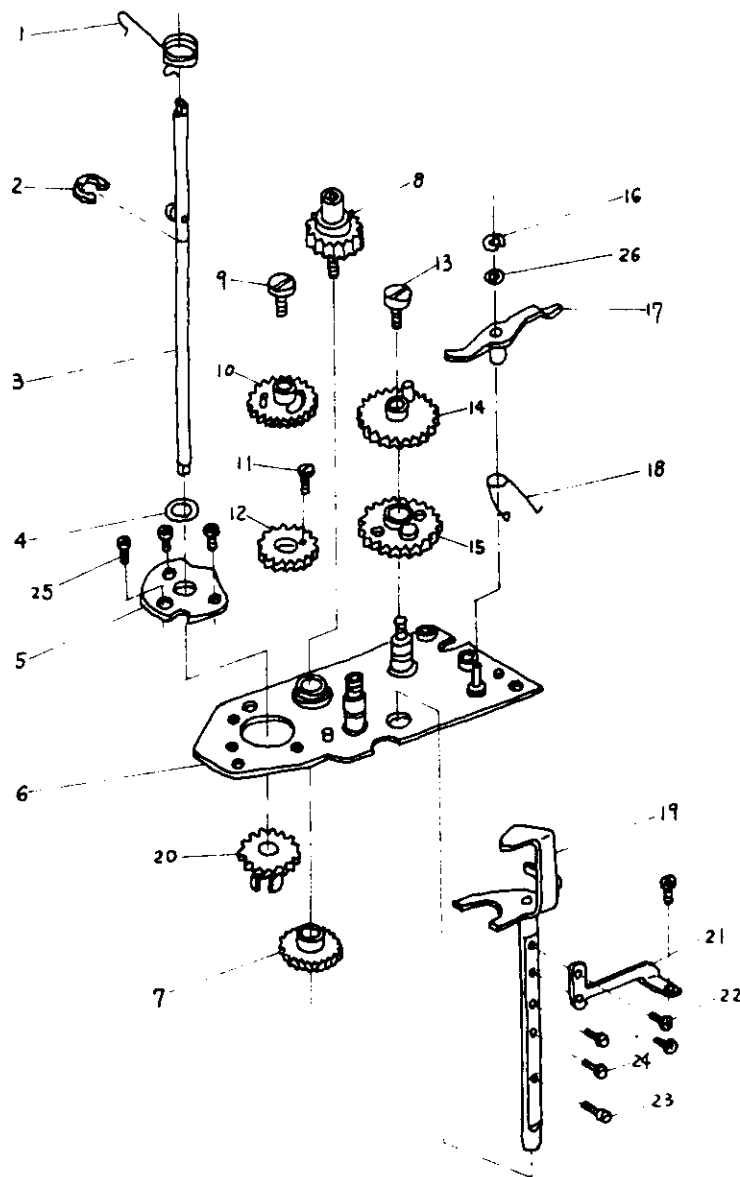


PARTS NO	DESCRIPTION	QUANTITY
1 121605	Winding Spring	1
2 121658	Winding Shaft Fixer	1
3 121017	Winding Shaft Ass'y	1
4 60214110		
60224110	Adjusting Washer(Choice)	1
60254110		
5 128602	Winding Shaft Metal	1
6 ★	S-W Base Plate Sub Ass'y	1
7 170250	Idle Gear (Lower)	1
8 128651	Idle Gear (Upper)	1
9 121429	Clutch Shaft S.S.	1
10 128009	Clutch Upper Gear Ass'y	1
11 121434		
121435		
121436	Winding Stud (Choice)	1
128247		
128248		
128249		
12 170402	Clutch Lower Gear	1
13 121322	Gear Shaft S.S.	1
14 128013	Upper Gear Ass'y	1
15 128012	Lower Gear Ass'y	1
16 66101225	Snap Ring E-12	1
17 128010	Upper Gear Fixing Hook Ass'y	1
18 128236	First Curtain Fixing Hook Spring	1
19 128011	Clutch Shift Shaft Ass'y	1
20 121188	Spool Gear	1
21 128213	Shift Lever	1
22 61913024	Shift Lever S.S.	3
23 121423	Shift Shaft Pin (Choice)	1
121430		
24 121431	Shift Shaft Pin (Choice)	1
121432		
25 61912024	Winding Shaft Metal S.S.	3
26 60121810	Adjusting Washer	1
OTHER ASSEMBLY PARTS		ORDER NO.
S-W Base Plate		128015
Ass'y		5~19,25,26,

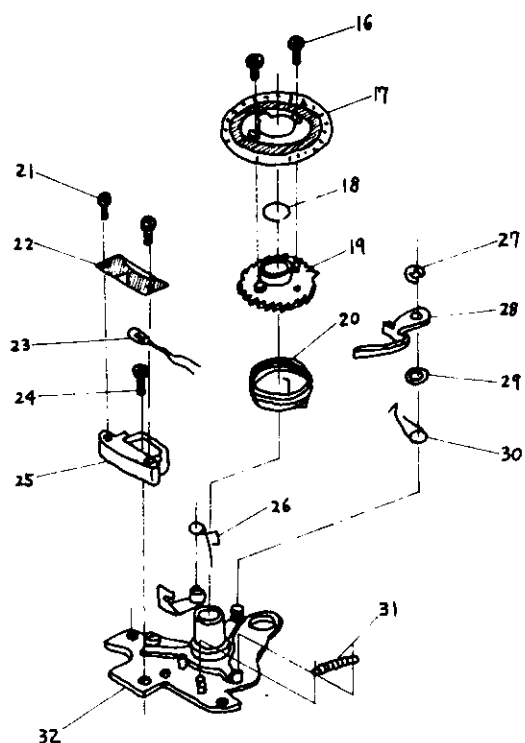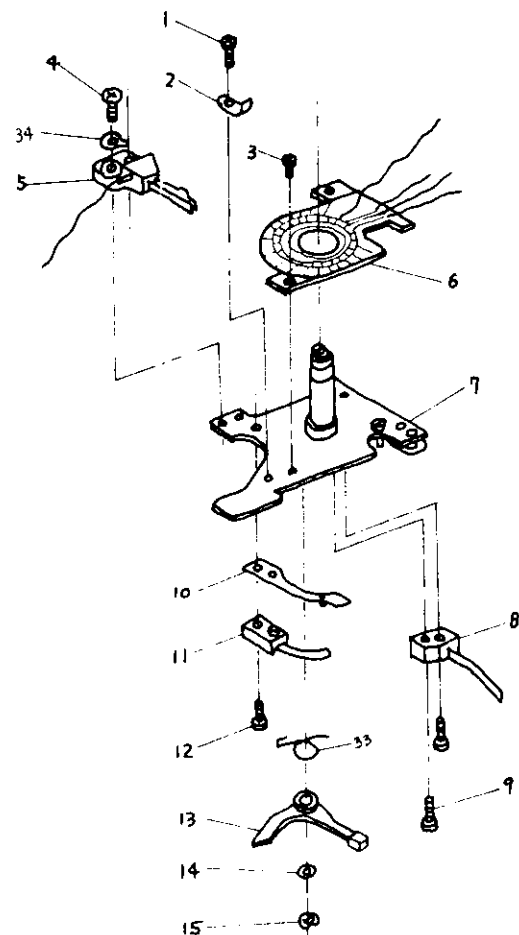


PARTS NO	DESCRIPTION	Qty
1 61911524	Lead Wire Holder S.S.	1
2 110928	Lead Wire Holder	1
3 61911824	Manual Changing Base S.S.	1
4 61914022	Auto-manual Switch Base S.S.	1
5 128324	Auto-manual Switch Base Ass'y	1
6 128342	Manual Changing Base	1
7 ★	Changing Dial Base Plate Sub Ass'y	1
8 128315	Trigger Switch Base Ass'y	1
9 61904024	Trigger Switch Base S.S.	2
10 128319	"B" Switch Brush (A)	1
11 128321	"B" Switch Base Ass'y	1
12 61913524	"B" Switch Base S.S.	1
13 128019	Trigger Connecting Lever Ass'y	1
14 60111810	Washer (Either Choice)	1
15 66101225	Snap Ring E-12	1
16 63901824	Counter Plate S.S.	2
17 128854	Counter Plate	1
18 121878	Counter Stopper Ring	1
19 101711	Counter Gear	1
20 121873	Counter Restore Spring	1
21 63901824	Counter Indicator S.S.	2
22 128855	Counter Indicator	1
23 128509	Battery Check Lamp	1
24 61802524	Counter Lamp Holder S.S.	1
25 128862	Counter Lamp Holder	1
26 121875	Stopper Claw Spring	1
27 121877	Shift Snap Ring	1
28 170501	Feeding Claw	1
29 60111210	Washer	1
30 121874	Feeding Claw Spring	1
31 121876	Counter Lever Spring	1
32 ★	Counter Base Plate Sub Ass'y	1
33 128313	Trigger Spring	1
34 170446	Lug Plate	1
OTHER ASSEMBLY PARTS ORDER NO. DESCRIPTION(FIG.NO.)		
Changing Dial Base Plate Ass'y	128020	1~15, 33, 34,
Counter Base Plate Ass'y	128C01	18~20, 26~32,

 NOTE : (Parts with marked "★" are not available)





NOTE : (Parts with marked "★" are not available)

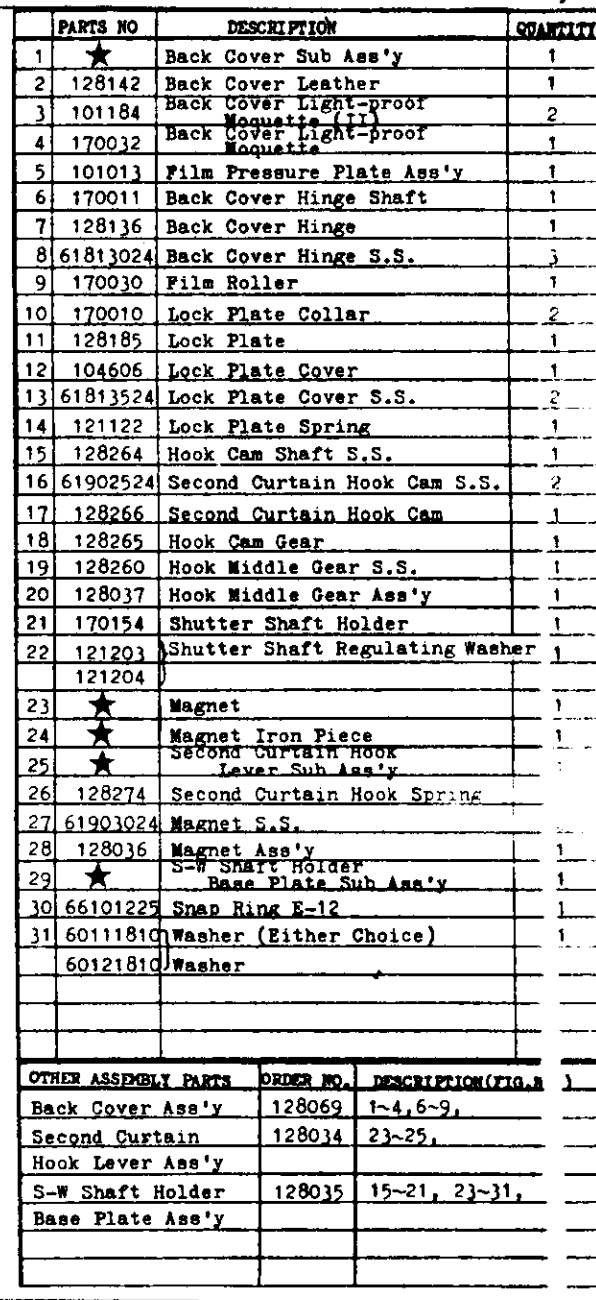


NOTE : (Parts with marked "★" are not available)

NOTE : (Parts with marked "★" are not available)

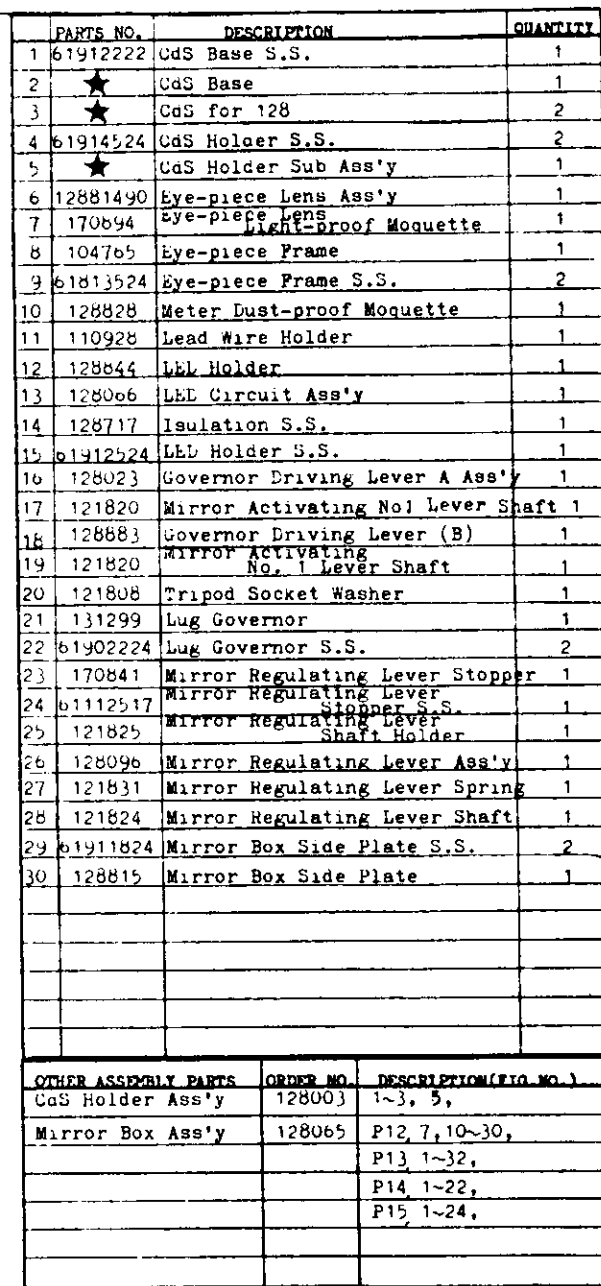


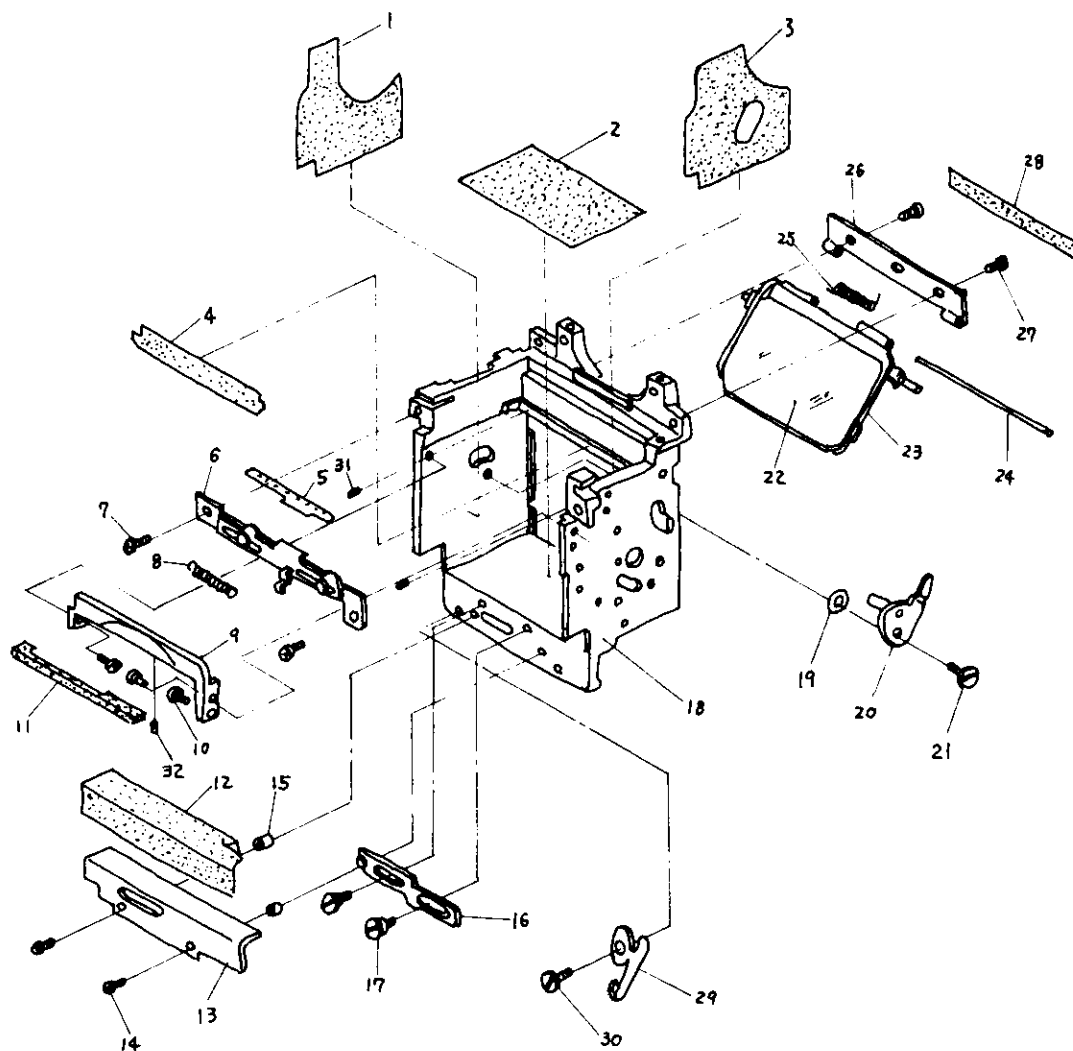[illegible]


NOTE : (Parts with marked "★" are not available)

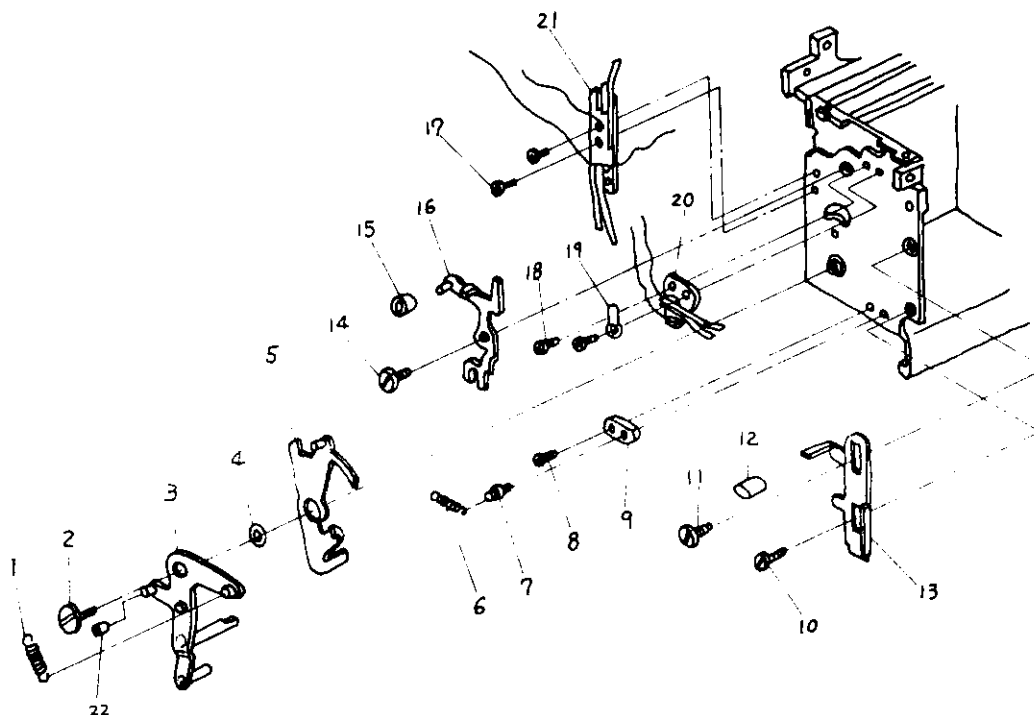

PARTS NO	DESCRIPTION	QUANTITY
1 128707	Mirror Activating Spring	1
2 104705	Mirror Set Lever Shaft	1
3 ★	Mirror Set Lever Sub Ass'y	1
4 60223310	Washer (Choice)	1
60213310		
60723310		
60753310		
5 128057	Mirror Activating No. 2 Lever Ass'y	1
6 128761	Set Lever Return Spring	1
7 128712	Set Lever Stopper S.S.	1
8 61913524	Set Lever Stopper S.S.	1
9 128711	Set Lever Stopper	1
10 128715	Slide Plate Shaft	1
11 128719	Slide Plate S.S.	1
12 66912503	Vinyl Tube (2.5ø)	1
13 ★	Slide Plate Sub Ass'y	1
14 121776	No. 2 Returning Lever Shaft	1
15 170879	Synchro Contact Insulation Tube	1
16 ★	No. 2 Returning Lever Sub Ass'y	1
17 61912524	Main Switch S.S.	2
18 61912524	Main Switch "Ib" S.S.	2
19 170446	Lug Plate	1
20 128064	Main Switch "Ib" Ass'y	1
21 128062	Main Switch Ass'y	1
22 66911502	Vinyl Tube (1.5ø)	1
OTHER ASSEMBLY PARTS		
Mirror Set Lever Ass'y	128058	3,22,
Slide Plate Ass'y	128047	12,13,
No. 2 Returning Lever Ass'y	128054	15,16,

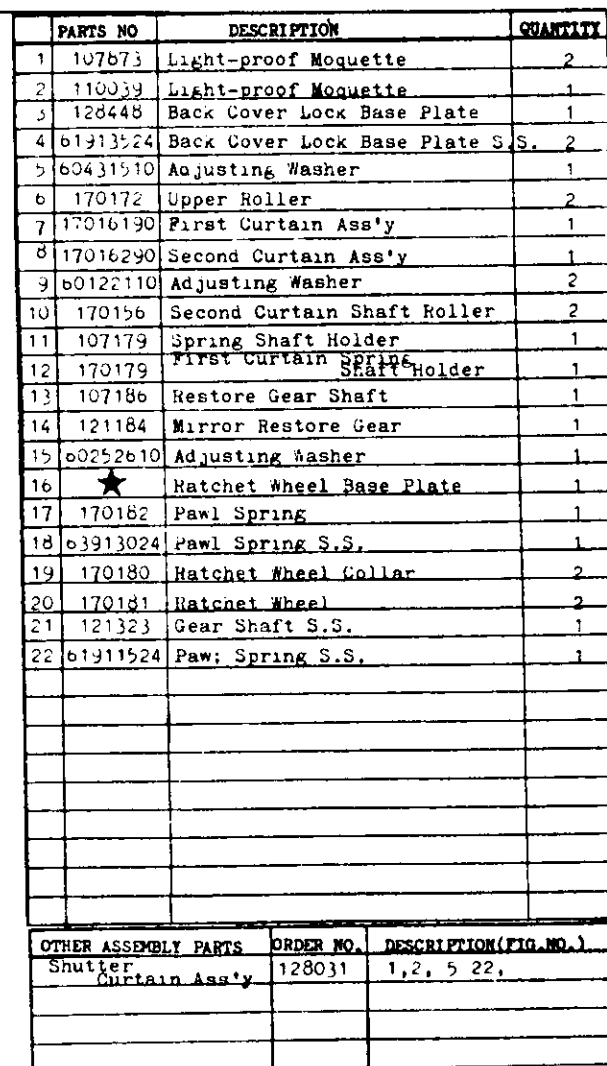

ORIGINAL

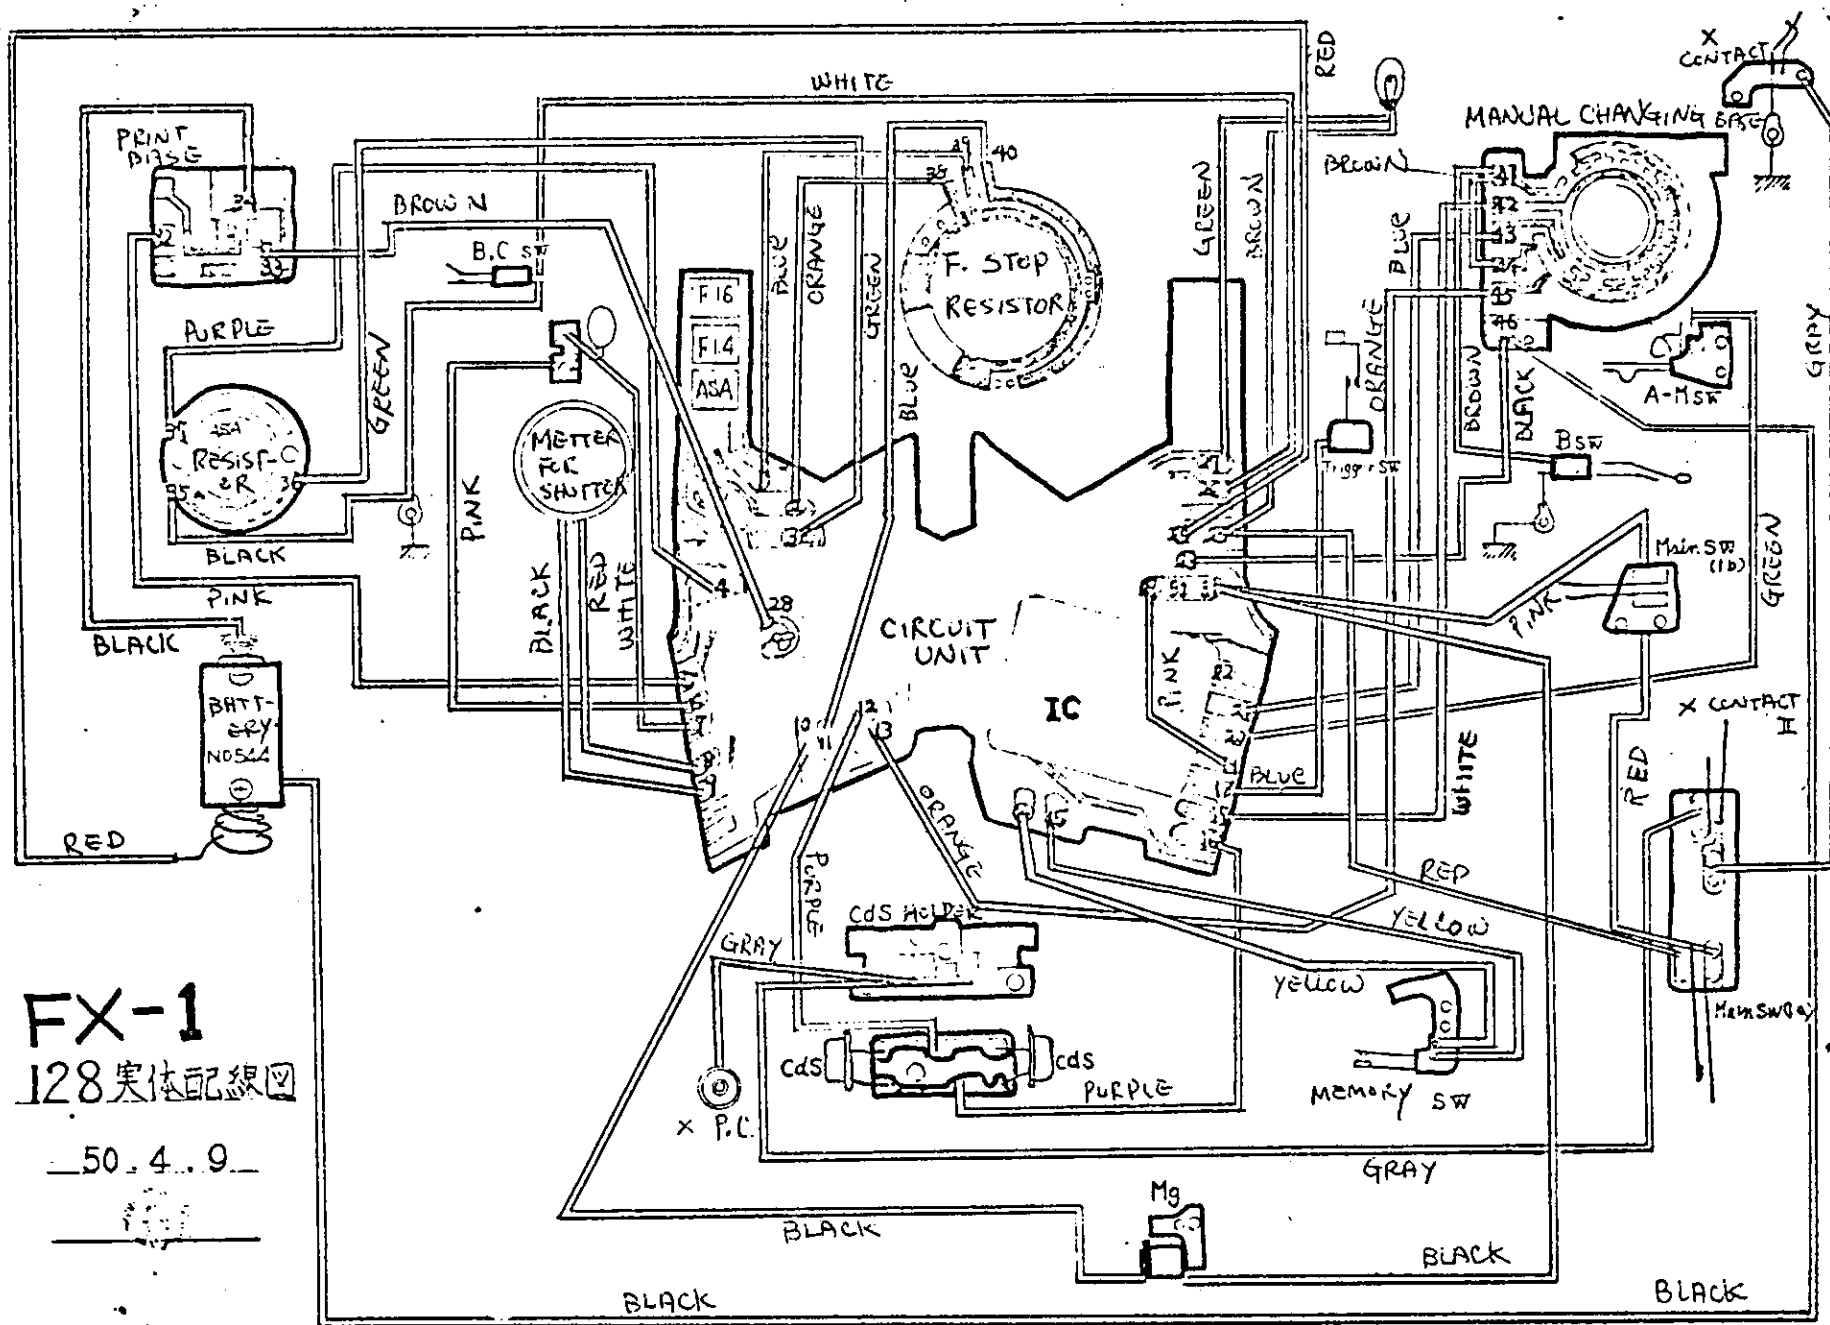

FX-1

128 実体配線図

50.4.9